

Hotpoint Service and Spares

FOR SERVICE: If you have a problem with your appliance ring your local Service Office.
FOR SPARES and ACCESSORIES: To purchase spares and accessories send your Accessories Order Form to your Spares Centre. If the accessory or spare part you want is not on the form, contact your Spares Centre for prices and availability.
Please address all correspondence to Hotpoint Spares Centre or Hotpoint Service Office as applicable.

Service Offices and Spares Centres are open between 8.00am-5.00pm Monday to Friday, except on Public Holidays. 8.30am-12.30pm on Saturdays.





 
EAST ● ESSEX: Industrial Buildings, Beehive Lane, Chelmsford, CM2 9TE. Post Codes RM & IG Tel: (0245) 492433 Remainder of Essex Tel: (0245) 269331 ● PETERBOROUGH: Celia Road, PE2 9JB Tel: (0733) 64741 For Spares Spares Administration Dept. Tel: (0733) 556520 ● LONDON ● WEMBLEY: 68 East Lane, HA9 7PD Tel: 081-904 4399 S. Herts and Middlesex Tel: 081-908 4722 Post Codes N, NW, E, EC Tel: 081-908 4722 Post Codes W, WC, SE, SW Tel: 081-908 2511 Tel: 081-904 0201 For Spares ● MIDLANDS ● BIRMINGHAM: Westgate, Aldridge, W Midlands, WS9 8UX. Post Codes B Tel: (0922) 743374 All other Post Codes Tel: (0922) 743376 Tel: (0922) 743377 For Spares ● NOTTINGHAM: Ashling Street, NG2 3JB. For Spares Tel: (0602) 860387 For Service Tel: (0602) 862431/864322 Tel: (0602) 774511 ● STOKE: West Ave, Nelson Estate, Talke, ST7 1TN. Tel: (0782) 864511 ● NORTH EAST ● WASHINGTON: 8 Bede House, Tower Road, Glover Est. District 11, NE37 2SH Tel: 091-417 3500/419 3535 Sandbeck Lane, LS22 4TW. Tel: (0937) 581261/581444 For Spares Tel: (0937) 581221 For Service ● WETHERBY: Mumford House, 26 Highgate, LA9 4SX. Tel: (0539) 724483 44/46 Station Road, Heaton Mersey, Stockport, SK4 3DT. Manchester North Tel: 061-432 0513 Manchester South Tel: 061-442 8677 Tel: 061-432 0255 7 Bridle Way, Merseside. Tel: 051-525 2342/524 2339 For Spares ● NETHERTON: ● SCOTLAND ● ABERDEEN: Holbeck House, 68 Carden Place, AB1 1UL. Tel: (0224) 642283 35 West Bowling Green Street, Leith, EH6 5NX. Tel: 031-554 1431 West Lodge Road, Blythwood Estate, PA4 9EN. Tel: 041-886 6241 For Spares Tel: 041-886 5611 ● SOUTH ● KENT: Larkfield Trading Est, New Hythe Lane, Larkfield, ME20 6SW. CT, DA, ME & TN Kent Post Codes Tel: (0622) 716571 CR, KT, RH, SW Surrey & BR Kent Post Codes (0622) 790707 GU Post Codes in Surrey Tel Southampton (0703) 667374 Tel: (0622) 716631 For Spares ● SOUTHAMPTON: Unit R, S Hampshire Ind Park, Salisbury Rd, Totton, SO40 3SA. Tel: (0703) 861981/867374 For Spares Tel: (0703) 867993 ● EDINBURGH: 1 Kingswood, North St, Hallsram, BN27 1DQ. Tel: (0823) 842733 69 Mulley Plain, PL4 6JH. Tel: (0752) 262631 ● PLYMOUTH: ● WALES Conwy Rd, Llandudno Junction, LL31 9RE. Tel: (0492) 576536 18 Western Ave, Bridgend Ind. Estate, Bridgend, CF31 3SL. Post Codes CF, SA & SY23-25 Tel: (0656) 664121 Post Codes BS, GL (not 55), HR, SY15-18, LD1-8, NP. Tel: (0656) 655554 Tel: (0656) 766111 For Spares	IRELAND ● NORTHERN: 256 Ormeau Road, Bellast, B17 2FZ. Tel: (0232) 647111 49 Airways Ind. Estate, Dublin 17. Tel: Dublin 426088 Tel: Dublin 426836 For Service For Spares ● EIRE: For Service For Spares	CHANNEL ISLANDS – Service provided by Agents. Normal Guarantees apply and all Service Schemes are available. ● JERSEY: 19 Don Street, St. Helier. Tel: (0534) 21625 Clos D’Ormes, Pontac, St Clements. Tel: (0534) 54808 or Valpy Stores, Grande Rue, St Martins, Guernsey. Tel: (0481) 38422 or Baras Lane, Vale, Tel: (0481) 51610 32 High Street, Tel: (0481) 822686 ● ALDERNEY:	ISLE OF MAN – Service provided by Agents. Normal Guarantees apply and all Service Schemes are available from 5 Drungold St., Douglas. Tel: (0624) 673233 or Tromode Works, Cronkbourne Village, Douglas, Tel: (0624) 676066 or 17 Ridgeway Street, Douglas. Tel: (0624) 258112/25848	SHELLAND, ORKNEY & WESTERN ISLES – Service provided by Agents. Normal Guarantees apply, but Service Schemes are NOT available. ● SHELLAND: Port Road, Lerwick. Tel: (0595) 2557 Hasstone Ind. Estate, Kirkwall. Tel: (0856) 5457 ● ORKNEYS: ● WESTERN ISLES: 27 Bayhead Street, Sornoway, Isle of Lewis Tel: (0851) 3387 ● OTHER ISLANDS: Local Hydro Electric Shops. ● EXCEPT ARRAN, BUTE & SKYE – Which are covered by Hotpoint.
---	--	---	--	---

In accordance with its policy of progressive product design, the Company reserves the right to alter specifications.
Hotpoint Ltd, Peterborough, PE2 9JB, England
016/4198/40

Printed in England G94

Contents

	page
Before you operate your washing machine	2
Know your machine	3
How to do a wash and dry	4-6
How to do a wash only	7-9
How to do a dry only	10-11
Using your machine as a dryer	12-13
Items not suitable for tumble drying	14
Special Care features	15
Sorting your laundry	16
Load your machine	17
Washing detergent	18
Fabric conditioner	19
Programmes	20-21
Selecting your programme	22-24
Additional wash features	25-26
The machine at work	27-28
Caring for your machine	29
If you think you have a problem . . .	30-32
If it still won't work	33
Changing the door door hinging	34-35
Hotpoint Service Cover	36
Hotpoint Service Offices and Spares Centres	back page

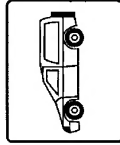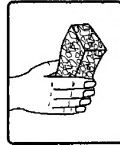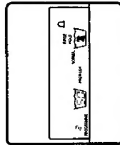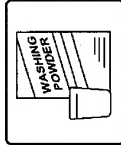


Hotpoint®



Before you operate your Washing Machine

1. Make sure that your machine is correctly installed.
Follow the Installation Instructions supplied with the machine.
If the Installation Instructions are missing, please contact your nearest Hotpoint Spares Centre (see back page).
2. **REMOVE THE TRANSIT BRACKET.**
YOU MUST NOT OPERATE THE MACHINE WITH THIS BRACKET IN PLACE.

Disconnect the machine from the electricity supply then follow the procedure as shown on the label on the back of the machine.

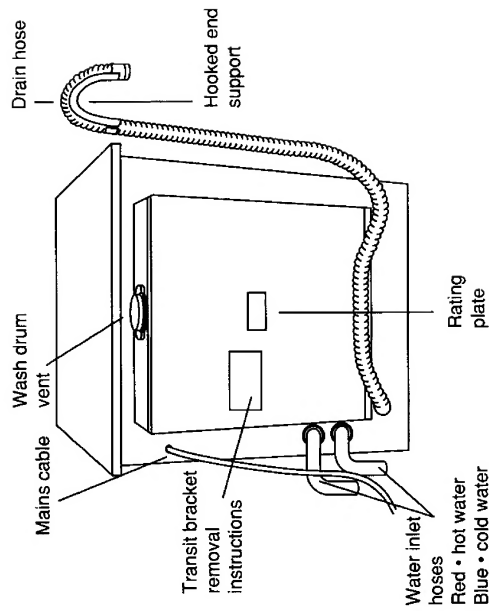

After the transit bracket has been removed it is normal for the door seal to appear creased. This will not impair the function of the machine.


3. Read these Instructions **before** using your machine.
- NOTE: Do not sit or stand on top of your washing machine; you could injure yourself or damage the machine by such abuse.**

WARNING: CHILDREN SHOULD NOT BE ALLOWED TO PLAY WITH THE APPLIANCE OR TAMPER WITH THE CONTROLS.

Know your machine




3 Compartment detergent and liquid detergent dispenser

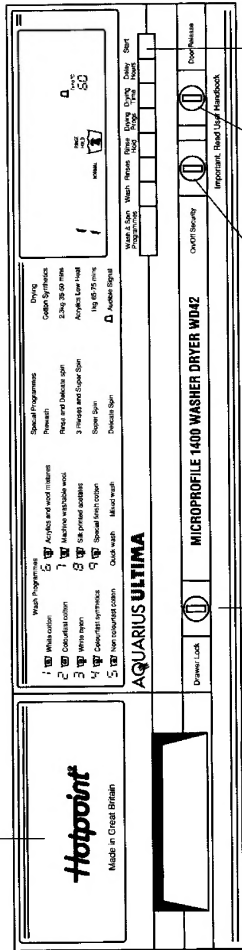

Drawer dispenser lock
On/Off security lock
Lockable door release button
Start button


How to open the inner door

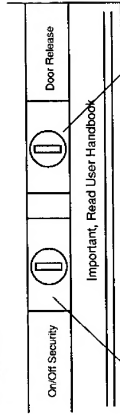

Press door release button
On/Off button with security lock
Lockable door release button

To open outer door press top right corner of door. See page 4


Programme Selector

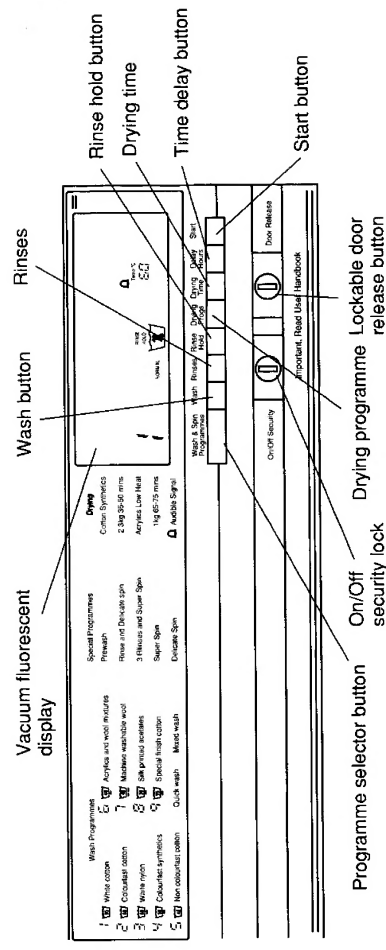




How to do a wash and dry

BEFORE THE WASH

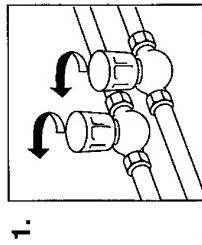


1. Turn on hot and cold water
Hot water should ideally be at 60°C (140°F) and must not be above 70°C (160°F).

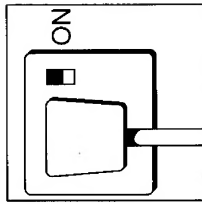


2. Plug in, switch on electricity

WARNING: ENSURE HANDS ARE DRY.

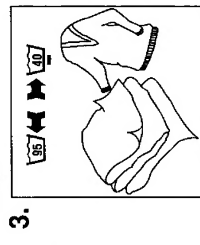


3. Sort your laundry
See page 16
Make up a load of similar fabrics

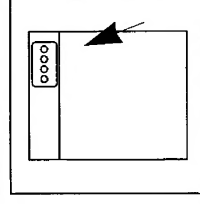


4. Press where arrowed to open outer door. Press Door Release button to open inner door

DO NOT TUMBLE DRY WOOLLENS


Load the machine. See pages 17, 20 and 21
Don't overload the machine

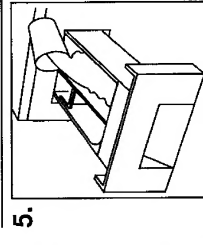


5. Add detergent and fabric conditioner
See pages 18 and 19

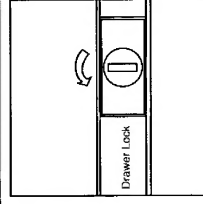

6. Lock the Dispenser Drawer
Turn the drawer lock in a 90° anti-clockwise direction to horizontal position

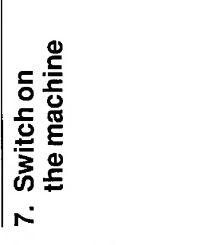

7. Switch on the machine
Press in the On/Off button
See page 22

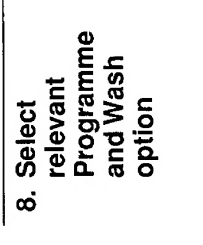

8. Select relevant Programme and Wash option
Press in Wash and Spin Selector button until required programme shows in display. Then press Wash button until relevant wash shows in display
See pages 20 and 21



Hotpoint Service Cover

Satisfaction Guaranteed or Your Money Back

Hotpoint gives you a unique 'Satisfaction Guaranteed' promise – valid for ninety days after you have purchased your Hotpoint product. If there is a technical problem with your Hotpoint appliance just call your Hotpoint Service Office (details in your telephone directory and the appliance instruction book). If necessary we will arrange for an engineer to call. If the technical problem is not resolved by us under this Guarantee, Hotpoint will replace your appliance or, if you prefer, give you your money back. Your statutory rights are not affected and the Guarantee is additional and subject to the terms of Hotpoint's Five Year Parts Guarantee.

Hotpoint's Free Five Year Guarantee
From the moment your appliance is delivered, Hotpoint guarantees it for **FIVE YEARS**.

- In the Five Years all replacement parts are **FREE** provided they are fitted by our own Service Engineer. During the first year your Engineer's time and labour is also free.
- After the first year we will charge for our Engineer's time and labour. We do, however, operate a range of Service Plans (see opposite) which for an annual payment enables you to cover any repair costs which may be necessary.
- All of our service repairs are guaranteed for twelve months in respect of our labour and any parts fitted.
- The appliance must be used in the United Kingdom and must not be tampered with or taken apart by anyone other than our own Service Engineer.
- You may, however, buy parts which can be safely fitted without specialist knowledge or equipment. The correct fitting of such parts, provided they are genuine Hotpoint spares, will not affect your Guarantee. Parts are available from our main Hotpoint Spares Centres.
- Our Guarantee does not cover the cost of any repair, or loss of food in refrigeration products, due to power failure, accidents or misuse. Nor does it cover the cost of any visit to advise you on the use of the appliance. Please read thoroughly the instruction book supplied with the appliance.
- If at any time during the Guarantee period we are unable to repair your appliance, we will refund any repair costs paid to us in the previous twelve months. We will also offer you a new appliance at a reduced charge instead of a repair.
- Our Guarantee is in addition to and does not affect your legal rights.
- Should you need independent advice on your consumer rights, help is available from your Consumer Advice Centre, Law Centre, Trading Standards Department and Citizens Advice Bureau.
- All Hotpoint servicing is done by our own Service Organisation located throughout the United Kingdom and Eire. We will be happy to deal with any problems.

Hotpoint's Service Care

Whether you have just one or a number of Hotpoint appliances in your kitchen, Hotpoint has a range of Service Plans to give you complete peace of mind. They enable you to extend your one year labour guarantee so that you can have repairs completed **FREE** during the membership period.

Service Cover

A single payment covers you for all repairs during the period of cover, which can be from 1 to 4 years. Service Cover also includes loss of food up to the value of £250 in refrigeration appliances. There is also an option of Service Cover with Maintenance at an additional cost. This includes an annual Electrical and Safety check and replacement of any parts as necessary.

Kitchen Cover

An annual payment covers you for all repairs for all your Hotpoint appliances which are less than 10 years old. It also covers the cost of loss of food up to £250 in our refrigeration and freezer products. There is also the option of Kitchen Cover with Maintenance at an additional cost. Any additional Hotpoint appliances purchased after you have joined Hotpoint Kitchen Cover will automatically be included during the annual period of cover without further charge. Full details of these Service Plans are provided in the User Handbook supplied with your Hotpoint product or from any Hotpoint Service Office.

Appliance Registration

To ensure that you have the opportunity to benefit from any of the above Service Schemes you should complete and return immediately the Appliance Registration Form supplied with your appliance. Full details and costs of our Service Schemes together with an application form will be sent to you at the end of the first year of the guarantee.

Annual Safety/Maintenance Checks
Hotpoint strongly recommends that all its appliances are regularly checked for electrical and mechanical safety whether or not they are covered by a Service Plan. Worn door gaskets or hoses may cause a leak on an appliance which could become dangerous if neglected.

Proof of Purchase

For future reference please attach your purchase receipt to this booklet and keep it in a safe place.


Spares and Accessories

Spares and accessories can be ordered from your local Hotpoint Spares Centre (listed on the back page), using the order form enclosed.

NOTE: Our Engineer will use every effort to avoid damage to floor coverings and adjacent units when carrying out repairs/service work but in locations where the Engineer advises you that it will be impossible to move the appliance without risk of damage, he will only proceed with your approval that no liability is accepted.




9. Select additional wash features if required

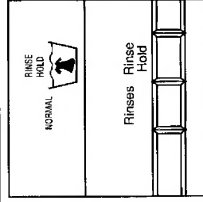


Rinses – select Normal, Reduced or Extra – see page 25
Rinse Hold – stops during the final rinse continue press Rinse Hold button
See page 25

10. Select drying programmes

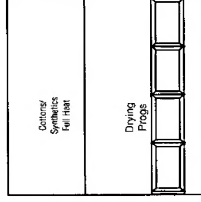


Press button once for Cottons/Synthetics – Full Heat
Press button twice for Acrylics – Low Heat

11. Select Timed Drying

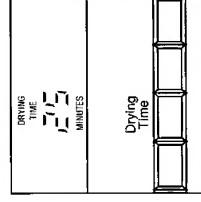


Press and hold down Drying Time button to select drying time required
See pages 20 and 21

12. Select Delay Hours if required

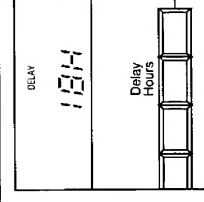


Delay Hours – Delays the time you wish the programme to finish
See page 25

13. Lock the On/Off and Door Release Buttons (if required)

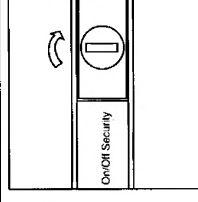

Turn the On/Off Security and Door Release Buttons in a 90° clockwise direction to horizontal position. It is recommended that the buttons are locked if children are in the vicinity
See page 22

14. Start the machine

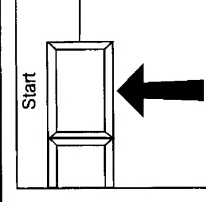


Press the Start button



AFTER THE WASH AND DRY


- 15. Unlock the On/Off and Door Release Buttons (if applicable)**

Creasecare will appear in the display when the programme has finished.
Turn On/Off and Door Release buttons 90° anti-clockwise to release button to vertical position
See page 22

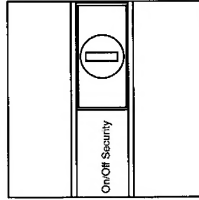


- 16. Press Door Release button and remove laundry**


For safety reasons the door remains locked whilst the drum is rotating.

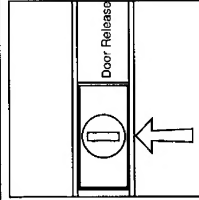

- 17. Switch off electricity**

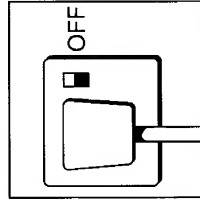

Turn off water

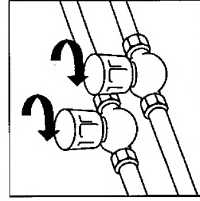


How To Do a Wash and Dry

WARNING: IT IS POSSIBLE FOR CHILDREN TO CLIMB INTO WASHING MACHINES AND INJURE THEMSELVES. ALWAYS SWITCH ELECTRICITY OFF AT THE SOCKET AND REMOVE PLUG AFTER USE.

WARNING: WHEN SWITCHING ELECTRICITY OR MACHINE ON OR OFF, PLEASE ENSURE THAT YOUR HANDS ARE DRY.



Fig.3 DECOR DOOR

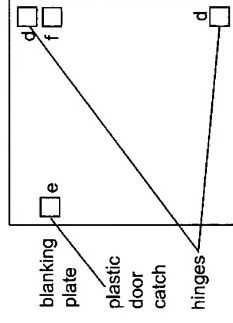

Locate the top hinge into the retaining hole on the top of the door. Carefully locate the top hinge into position. (Ensure that the screws and screwdriver are close at hand.)
Screw the top hinge into position. The decor door should now close.

10. Remove the plastic blanking plate (f) (Fig. 3).

Insert a small coin into the slot provided on the blanking plate (f). Grip the coin with fingers or pliers and rotate plate to release.
Remove the plate and replace where the catch was previously removed. Secure by rotating in the opposite direction to removal.

11. Turn the catch (e) 180° and place in position where the blanking plate (F) was removed.
Grip the catch carefully, with pliers and rotate in position to secure.

12. Place the lower hinge in position, locating the correct position.
Secure with hinge screws.

13. Carefully hang the door onto the lower hinge.


Inserting the Decor

Panel

Decor panels are available from most kitchen manufacturers.

Decor Panel Sizes:

Door – Height 526mm, Width 587mm
Thickness – 4mm maximum or up to 8mm if the edge is thinned down to 4mm for a width of 3.5mm as shown in Fig. 4.

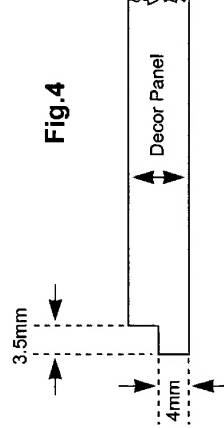

To fit decor panels first make sure that they are cut to correct size.

Inserting the Decor Door

1. Remove the decor door by unscrewing the top door hinge.
2. Remove the trim from the top of the decor door.
3. Loosen the screw in the side and base trims.
4. Slide the decor panel into position, from the top, between the trim and front of the decor door.
5. Tighten the screws in the side and base trims.
6. Replace the top trim and fix into position.
7. Rehang the decor door on the bottom hinge and replace the top hinge.



Changing the Decor Door Hinging

WARNING: Switch off the electricity supply to the appliance **BEFORE** changing the door hinging.


Method:

1. Open decor (outer) door.
2. Unscrew and remove blanking plate (a) on the Washer Dryer (Fig. 2).
3. Unscrew and remove catch (c) on Washer Dryer (Fig. 2). Turn 180° and replace where the blanking plate was removed.
4. Screw in blanking plates (a) where catch (c) was removed.
5. Unscrew and remove the two blanking plates (b) (Fig. 2). Retaining the plates and the screws.
6. Unscrew and remove the two decor door hinges (d) (Fig. 2). It is advisable to have another person hold the decor door whilst the hinges are removed. Retain the hinges and screws.
7. Locate and screw in blanking plates (b) into the slots where the door hinges (d) were removed.
8. Place the decor (outer) door on a flat surface, beneath padding to protect the outer surface.
9. Remove the plastic door catch (c) (Fig. 3). Grip the catch carefully, with pliers and rotate the catch to release it. Remove the catch.

You will need a:


- No. 2 Posidrive screwdriver
- A large pair of pliers
- A small coin.

Fig.1 DECOR DOOR

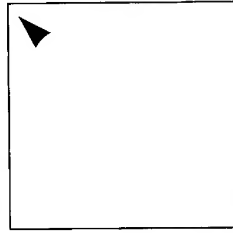

Press top right hand side and door will open

Fig. 2 WASHER DRYER

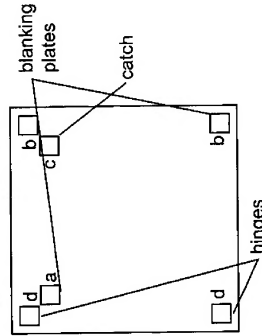


How to do a wash only




BEFORE THE WASH

1. **Turn on hot and cold water**
Hot water should ideally be at 60°C (140°F) and must not be above 70°C (160°F).

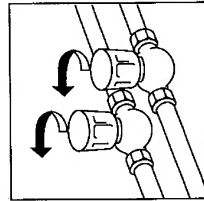


Plug in, switch on electricity

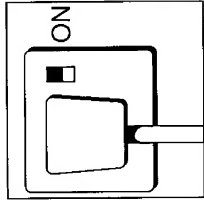


WARNING: ENSURE HANDS ARE DRY.

3. **Sort your laundry**
See page 16
Make up a load of similar fabrics

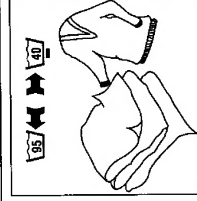


4. **Press where arrowed to open outer door. Press Door Release button to open inner door**

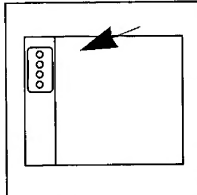


Load the machine
Do not overload the machine

DO NOT TUMBLE DRY WOOLLENS

5. **Add detergent and fabric conditioner**
See pages 18 and 19

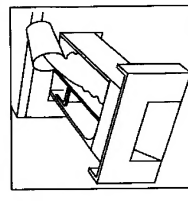


6. **Lock the Dispenser Drawer**
Turn the drawer lock in a 90° anti-clockwise direction to horizontal position

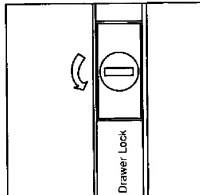


7. **Switch on the machine**

Press in the On/Off button
See page 22

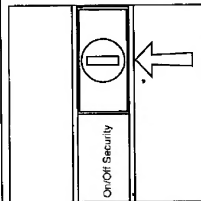

8. **Select relevant Programme and Wash**

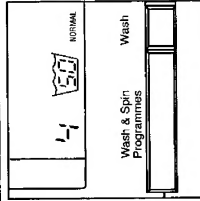


Press in Wash and Spin Selector button until required programme shows in display. Then press Wash button until relevant wash shows in display
See pages 22 and 23



If it still won't work . . .




9. Select optional wash features if required

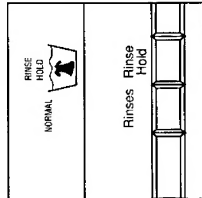


Rinses – select Normal, Reduced or Extra – see page 25
Rinse Hold – stops during the final rinse
Rinse Hold light will flash. To continue press Rinse Hold button – see page 25

10. Select Delay Hours if required

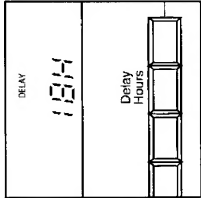


Delay Hours – Delays the time you wish the programme to finish
See page 25

11. Lock the On/Off and Door Release Buttons

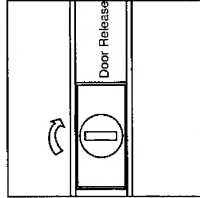

Turn the On/Off Security and Door Release buttons in a 90° clockwise direction to horizontal position
See page 22


12. Start the machine

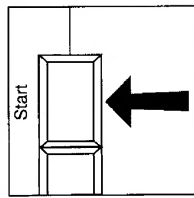

Press the Start button
See page 26


AFTER THE WASH

13. Release the On/Off and Door Release buttons (if applicable)

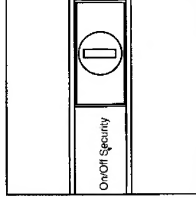

When 'END' is showing in the display the programme has finished.
Turn On/Off and Door Release buttons 90° anti-clockwise and release button to vertical position
See page 22

14. Press Door Release button and remove laundry

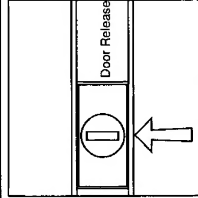

For safety reasons the door remains locked whilst the drum is rotating.

Emergency door opening

If the machine is full of water with your clothes inside, you can open the door by following these instructions. You will need a bucket. First you have to empty some of the water, so that the safety latch will release the door.

1. Turn off the hot and cold taps, switch off the electricity and unplug the machine. Do not use machine again until the Service Engineer has called.
2. Pull out the machine so that you can get at the back of it.
3. Place the end of the Hose in a bucket to drain the water. Draw off about two bucketfuls.

WARNING: BE CAREFUL, THE WATER MAY BE VERY HOT.

4. When sufficient water has been removed you will be able to open the door.

Retention of this Instruction Book

This Instruction Book must be kept handy for reference as it contains important details on the safe and proper use of the appliance.

If you sell or pass the appliance to someone else, or move house and leave it behind, make sure this Book is also provided so the new owner can become familiar with the appliance and safety warnings.



If the Book is lost or damaged a copy may be obtained from Hotpoint Ltd, Celta Road, Peterborough, PE2 9JB.



<i>The clothes are not dry enough after spinning</i>	Did you select the right programme for the type of fabric? Did the water pump out? (Check waste plumbing arrangements.) Have you selected a hot wash? See pages 20 and 21. Hot programmes can take a long time, especially if the water has to be heated up from cold. Other things that can lengthen the programme are: – Prewash – Low water pressure – Modifying your machine to cold fill only
<i>Machine takes a long time</i>	
<i>The clothes are not clean</i>	Did you select the correct programme? (Try a prewash next time and the correct wash programme.) Did you use the correct quantity of detergent? (See page 18.) Did you select the correct wash options? Was the machine overloaded? Good wash results are only obtainable with the recommended wash load. There is usually no fluff cleaning necessary on your Hotpoint Washer/Dryer, it is all pumped away down the drain. However, you should refer to additional drying notes on page 14.
<i>How do I clean out the fluff</i>	
<i>The clothes come out with fluff on them</i>	Have you used the dryer independently or tried to dry a fluffy load? After drying a particularly fluffy load or independent drying it is advisable to set your machine to rinse and spin to wash away any remaining fluff (see additional drying notes on page 14). Is the cold water inlet hose connected to the cold tap and the water turn on? Have you overloaded the dryer? (See pages 14, 20 and 21.) Have you set the correct drying time? (Pages 12, 20 and 21.) Have you selected the right heat setting? (Pages 12, 20 and 21.) Have the clothes been mislabelled? Does the label have the correct wash code number for the type of fabric (pages 14, 16, 20 and 21)?
<i>The clothes are very creased</i>	Have you overloaded the dryer? (See pages 14, 20 and 21.) Have you selected the right heat setting? (Pages 12, 20 and 21.)

IF YOU INSTALL YOUR MACHINE CORRECTLY AND FOLLOW THE USER INSTRUCTIONS SUPPLIED, YOU ARE UNLIKELY TO EXPERIENCE DIFFICULTIES.

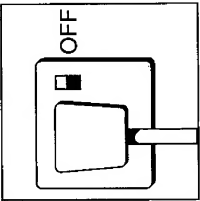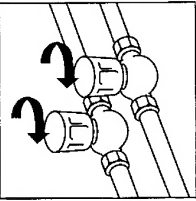

15. Switch off electricity		Turn off water	
-----------------------------------	---	-----------------------	---

WARNING: IT IS POSSIBLE FOR CHILDREN TO CLIMB INTO WASHING MACHINES AND INJURE THEMSELVES. ALWAYS SWITCH ELECTRICITY OFF AT THE SOCKET AND REMOVE PLUG AFTER USE.


WARNING: WHEN SWITCHING ELECTRICITY OR MACHINE ON OR OFF, PLEASE ENSURE THAT YOUR HANDS ARE DRY.



How to do a dry only


BEFORE THE WASH

1.

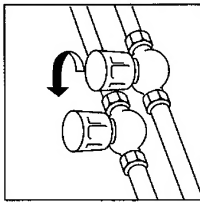

Turn on cold water
Yes, even for drying


2.

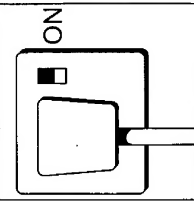

Plug in, switch on electricity


**WARNING:
ENSURE
HANDS
ARE DRY.**

3.

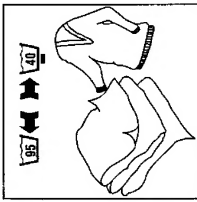

Sort your laundry
See page 16
Make up a load of similar fabrics


4.

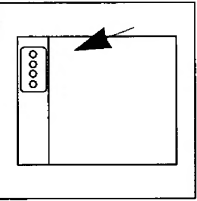

Press where arrowed to open the outer door.
Press Door Release button to open inner door.

DO NOT TUMBLE DRY WOOLLENS


5.

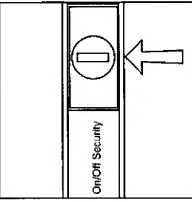

Switch on the machine
Press in the On/Off button
See page 22

6. Select relevant rinse and spin programme (if required)
See page 24

7. Select drying programmes

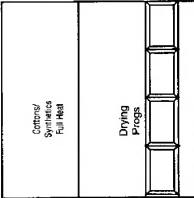


Press Drying Programmes button once for Cottons/Synthetics – Full heat
Press button twice for Acrylics – Low Heat
See pages 20 and 21

8. Select Timed Drying



Press and hold down Drying Time button to select the drying time required
See page 12

9. Select Delay Hours if required

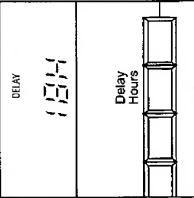

Delay Hours – Delays the time you wish the programme to finish
See page 25



Steam is coming out of the detergent dispenser drawer	During HOT washes the machine is designed to vent steam from the dispenser drawer and this is quite normal.
Water flowing into the machine and out of the drain hose at the same time	Is the drain standpipe at least 500mm (20in) above floor level? See Installation Instructions booklet. Has the drain hose been pushed down the standpipe more than 50mm (2in)? If so, then raise it.
Suds are coming out from the detergent dispenser	Did you use the right quantity of LOW SUDS AUTOMATIC DETERGENT ? Select a rinse programme and flush the machine through.
It makes a noise or vibrates during spin	Your Automatic will make some noises, especially while spinning. If vibration is excessive, check that you have removed the transit packing. See Installation Instructions. Small loads of heavy or bulky items (towels, bath mats, jeans, etc) can cause out of balance conditions but the machine will usually sort itself out. Check also that your machine is resting firmly on the floor. See Installation Instructions regarding levelling of the machine. Note: Rattling and scraping noises are not normal and may need attention!
It won't pump out	Has the drain hose been installed correctly? (See the Installation Instructions.) Is the hose kinked? If you have connected to a sink waste spigot, is the spigot blocked? What you can hear is the water used to condense out the moisture from the clothes – it is quite OK.
It is 'filling' with water whilst drying	Press the 'On/Off' button to switch the machine off. After a few seconds switch on and try to reset your programme. If the 'E' persists, switch the machine off, unplug it and follow the advice given on page 26.
'E' has appeared in the Programme Display	Has the door lock been set, see page 22. Is the door locked? Has the programme finished? Could it be on Rinse Hold? Is there water still in the machine? Check your drain outlet and waste pipe connections. If your waste installation is wrong, water could be running back into the machine causing the door to lock! Spin out and try again. Emergency door opening procedure is explained on page 33.
The door won't open	



If you think you have a problem . . .






Look at this list, then check the adjacent suggestions. They may give you the answer to your problem, without having to telephone your Hotpoint Service Office.


If you cannot solve the problem, follow the advice given on page 33.

Problem	Check these things first
<i>Powder dispenser drawer won't close properly</i>	Ensure flap is fitted correctly. See page 29. Is the drawer jammed with detergent?
<i>It won't start</i>	Have you selected the programme? Is the loading door closed firmly? Is it plugged in and switched on at the mains? Is the socket OK? (Try another appliance in it.) Has the fuse blown? (Try a new fuse of the correct rating.)
<i>It won't fill or take in the detergent</i>	Are the taps turned on fully? Are the fill hoses kinked behind the machine? Have you got the hoses connected correctly. See page 2. Have you selected the programme correctly and pulled out the selector knob to start the machine? If you are using a liquid detergent dispenser – did you put powder in the liquid detergent dispenser by mistake?
<i>The programme sticks at the end of the wash or during the rinses</i>	Has the drain hose been installed correctly? If not, syphoning could occur and this will halt the programme. Check the Installation Instructions. It is important that you do not remove hooked end support and push the hose too far down the waste standpipe.
<i>It's leaking</i>	Are the fill hoses tightened correctly? – Perhaps the washers are not sealed properly. Is your standpipe blocked? Is your household drainage system blocked? If you cannot clear the blockage yourself, you will need a plumber. Removal of the hooked end support may cause a leakage.
<i>It's stopped in mid programme</i>	After the initial fill, the machine may sometimes pause while the heater comes into operation. It should continue after the selected temperature is reached. Has it stopped on RINSE HOLD? If so, press the button to continue the programme. NOTE: The Rinse Hold light (if fitted) only operates when the Rinse Hold feature is reached in the programme.

If you Think you have a Problem

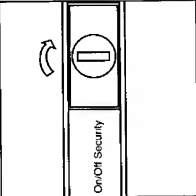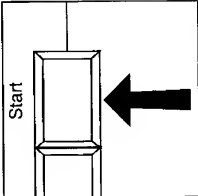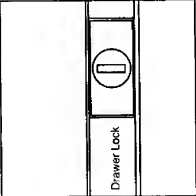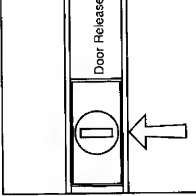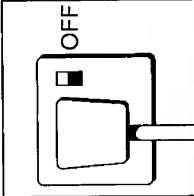

10. Lock the On/Off and Door Release buttons		Turn the On/Off Security and Door Release buttons in a 90° clockwise direction to horizontal position
11. Start the machine		Press the Start button
12. Unlock the On/Off and Door Release buttons		Creasecare will appear in the display when the programme has finished. Turn On/Off and Door Release buttons 90° anti-clockwise and release button to vertical position See page 22
13. Press Door Release button and remove laundry		For safety reasons the door remains locked whilst the drum is rotating
14. Switch off electricity		Turn off cold water

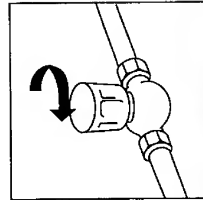

WARNING: WHEN SWITCHING ELECTRICITY OR MACHINE ON OR OFF, PLEASE ENSURE THAT YOUR HANDS ARE DRY.



Using your machine as a dryer

Your machine dries like any other tumble dryer, by blowing hot air over the wet clothes. It is slightly different in the way it removes the moisture. Normally the damp air is vented through a tube and out of a window, but in the Hotpoint Washer Dryer the moisture is condensed out of the air as it flows over cold water from the mains and is then pumped away down the drain.

To enable the condensing action to work you must always remember to turn on the cold water tap (and hook the drain hose over the sink, if the

machine is not permanently plumbed in).

You can use your machine for drying in two ways:


1. Automatic drying after any wash, rinse or spin programme (except woollens, programme 7 and silks and printed acetates – Programme 8).
2. As an independent dryer.

Automatic drying

This is simplicity itself. Once you have set the Programme Selector all you have to do is set the timed drying below.


TIMED DRYING

1. Select Drying Programme

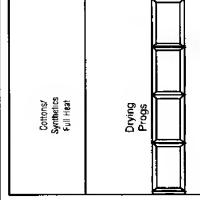


Press button once for Cotton/Synthetics – Full Heat.
Press button twice for Acrylics – Low Heat.

2. Select drying time

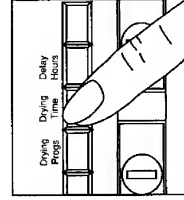


Press the **Drying Time** button to select a drying time.

3. Select a Time Delay and/or cancel the End of programme Audible Signal if required

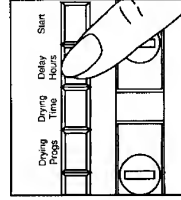


Press the **Delay Hours** button once to cancel the End of Programme Audible Signal only. Press again to select a delay time in hours to the completion of the programme

4. Lock ON/OFF Security and Door Release buttons (if applicable)

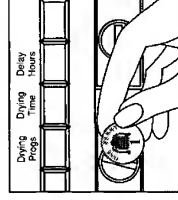

5. Start Dryer, press Start button

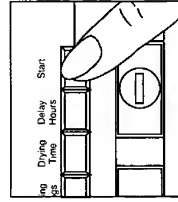

Caring for your machine

When the programme has finished:



- press in the Programme Selector
- cancel any feature buttons.

After each wash:

- open door, remove clothes and rotate drum to check for small items left behind.
- remove dispenser drawer for cleaning.

To clean dispenser:

1. Pull out the drawer until it reaches its stop, then lift slightly and give it a sharp tug to remove it completely (see diagram).

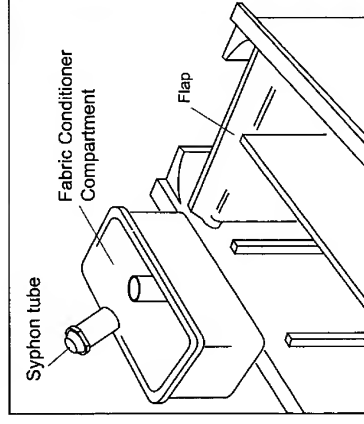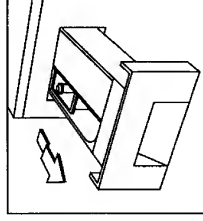

As necessary

 
Clean exterior surfaces with a damp cloth or silicon polish only.

Do not use abrasive cleaners, scouring agents, acids, chlorine bleach or metal polish to clean any part of the machine. This could damage it.

Yearly. We recommend you take out a Hotpoint Service Cover Plan with annual safety/maintenance check which ensures the machine is professionally serviced every year. Details are given at the end of this book.

Hotpoint strongly recommends that all of its machines are regularly checked for electrical and mechanical safety whether or not they are covered by a Hotpoint Service Cover Plan. This is to avoid such things as worn door gaskets or hoses which may cause a leak on a machine which could become dangerous if neglected.

2. Remove fabric conditioner compartment.
3. Pull off syphon tube and clean conditioner compartment.
4. Push syphon tube **firmly** back into place in the conditioner compartment.
5. Clean the dispenser drawer and dry thoroughly.
6. Replace the conditioner compartment in the dispenser drawer, with the syphon tube towards the back.
7. Check that the flap at the back is in place and pivots correctly.



Prewash adds 30 minutes.
An additional RINSE adds 5-10 minutes.

The time taken for 'Profile' Wash Programmes is longer than the Normal Wash Programmes. This is deliberately designed to allow you to obtain the best washing performance at the lower 'profiled' wash temperatures, but with considerable savings in electricity.

If you wish, however, to have a shorter wash then you may either select the 'Light Wash' or 'Quick Wash' for lightly soiled loads, or the 'Normal' or 'Profile Wash' for heavily soiled loads.

Dry:

Add on the selected drying time to the wash programme time to give you a total programme time.


The Machine at Work

WARNING: DO NOT TOUCH THE GLASS DOOR WHEN THE MACHINE IS IN OPERATION AS THIS AREA CAN BECOME HOT.




AFTER THE DRYING PROGRAMME HAS FINISHED


6. Unlock ON/OFF Security and Door Release buttons
(see page 22)

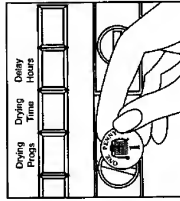

7. Switch OFF
Press On/OFF security (see page 22)

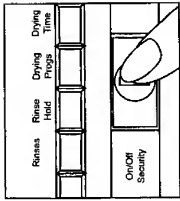

8. Open door and take out laundry
Press Door Release

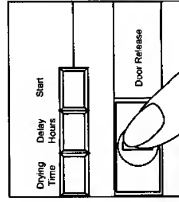

9. When finished, switch off electricity and remove plug from socket.

Using Your Machine as a Dryer



 
Items not suitable for tumble drying

- Those containing foam rubber or rubber-like materials or plastic film, eg. pillows, cushions, PVC rainwear, or any other articles which are inflammable or contain inflammable substances (eg. towels contaminated with hair lacquer).
- Fibreglass (eg. some types of curtains).
- Items which have been dry cleaned.
- Woollens. Woollen items need as much care in drying as they do in washing. The movement of the tumble-drying action causes the woollen fibre to shrink and distort.
- Garments with the ITCL code ☒ - Do not tumble dry.
- Large bulky items (eg. continental quilts, sleeping bags, pillows, cushions, double blankets and large bedspreads). These expand when drying and would prevent air flow through the Dryer.

WARNING: THE DRYER IS INTENDED FOR USE ONLY WHERE WATER SOLUTION IS USED FOR THE CLEANING PROCESS. MISUSE OF A TUMBLE DRYER MAY CREATE A FIRE HAZARD.

NOTES

1. Your machine will wash and dry a full load of synthetic fabrics without resetting (maximum load 2kg, 4.4lb).
2. If you are washing and drying cottons you must restrict the load to 2.3kg (5lb).
3. If you want to wash a full 4.5kg (10lb) of cottons you MUST remove half of the load at the end of the wash cycle and then dry both halves separately.
4. Separate large and small items to avoid sheets etc, enveloping small items.



The machine at work

What's it doing now

If you haven't had an automatic before, you may be puzzled by what the machine is doing as it starts, stops, fills and empties. But rest assured, all of its actions are carefully planned to give you the best possible wash.

This is the normal cycle of a wash:

1. **Fill** with water, tumbling to mix the detergent.
2. **Heat** to required temperature, with the occasional tumble, the 'HEAT' light on the Progress Display will glow.
3. **Wash** the clothes, by tumbling, showering, stopping and reverse tumbling.
4. **Cool rinses**. Note that on synthetic programmes 3, 4, 6 and 8, the first rinse has a stepped cool down feature by which cold water is added to the hot wash water to gradually reduce its temperature and prevent shock creasing of the washing. Each rinse will be identified on the display as 'RINSES'.

5. **Dispense fabric conditioner**. If you have added conditioner it is dispensed on the final rinse.

6. **Rinse Hold**. If selected, the machine will retain the final rinse water and tumble every minute, the Rinse Hold light will flash and will beep five times. To continue, press the Rinse Hold button.

7. **Spins**. Each rinse is followed by a series of spins to remove rinse water and minimise creasing, so don't worry when you hear changes in spin speeds.

8. **Tumble**. After the final spin there is a short tumble period to loosen the clothes.

NOTE: This will not occur after a Quick Wash.

9. **Drying**. Don't be alarmed if you hear water running – it should do. It is necessary for the machine to dry your clothes properly. Your machine also features Reversomatic drying – it will repeatedly stop and reverse for more efficient drying.

10. **End**. At the end of the programme the machine will beep three times at one minute intervals to let you know that it has finished. The Programme Display will show 'G' at the end of the wash and 'Creasecare' at the end of the dry programme.


WARNING: IT IS POSSIBLE FOR CHILDREN AND ANIMALS TO CLIMB INTO WASHING MACHINES AND INJURE THEMSELVES.

How long do programmes take?

We cannot say exactly how long a programme will take, as it will depend on how hot the water in your tank is to start with, and how long the machine will take to heat it up to the right temperature for the wash. If the water is fairly cool (for example, if someone's just had a bath), then it will take longer to heat up. Programme time is also dependent on the wash option selected.

The following are approximate programme times in minutes:

Wash:	Dirt Level	
	Normal	Profile Light
Quick Wash	-	30
Mixed Wash	240	-
50	110	140
60	90	100
70	85	90
80	60	75
90	55	60

 

soon as the Start button is pressed. Use of the Time Delay will suppress the bleep signals for Rinse Hold and End of Programme.

When you are happy with your choice of programme you can lock the On/Off button to prevent the machine being accidentally switched off. To do this insert a coin into the slot and turn through 90° clockwise. To release turn through 90° anti-clockwise.

DON'T FORGET TO CANCEL BUTTONS AT THE END OF THE PROGRAMME.

Starting the Machine

When you are satisfied that you have selected the required programme and optional features, start the machine by pressing the green Start button.

If you realise that you have made a mistake after pressing Start you can still cancel the programme by releasing the On/Off button to switch the machine off, then press again to switch back on, and re-select your programme and optional features. If the door is left open the machine will bleep twice every 5 seconds until you close the door.

Adding Forgotten Items

Forgotten items can be added to the wash immediately after pressing the START button press the DOOR RELEASE button to open the door. Add the forgotten items, close the door and the programme will recommence.

Audible Signals

At various times when using your machine you will hear a bleep or series of bleeps, the chart below describes what they mean.

Number of Bleeps

Reason

- 1 Acknowledges your command when you press a button at any time ie. machine bleeps every time you press a button before or after start.
- 2 Tells you that you have left the door open. (See Error Conditions.)
- 3 Tells you that the machine has finished and when in Creasecare.
- 5 Tells you that the machine is on Rinse Hold.

If you wish to suppress the Rinse Hold and End of Programme bleeps, simply press the Delay Hours button once before pressing Start. If the door is not closed after a programme has been selected an audible warning will be given and 'door open' flashes until you close the door.

Error Conditions

When an error occurs during the machine's cycle an 'E' and an error code for a Service Engineer is shown in the display and the machine will automatically be emptied of water. At this point the machine will bleep twice and repeat every two seconds.

To re-set the machine press the On/Off button to switch it off, then press again to switch back on, re-select your programme and Optional Features and press Start.

If the error persists and you have gone through the Checklist on pages 30 to 32, then remove the washing and turn to page 33 'If it still won't work ...'

Special Care Features

Cool Tumble

12 minutes before the programme is completed the heating elements are switched off and the Display shows 'COOL TUMBLE' which means the programme has entered the final Cool Tumble phase. During this phase the fabric is cooled. You should normally allow the Dryer to complete the Cool Tumble phase before removing the clothes as this minimises creasing.

 
WARNING: IT IS NOT ADVISABLE TO REMOVE ITEMS FROM THE DRYER UNTIL THE DRYING PROGRAMME HAS COMPLETED ITS HEATED DRYING CYCLE. IF IT IS ESSENTIAL THAT ITEMS ARE REMOVED BEFORE COMPLETION OF THE DRYING CYCLE, THEN ON NO ACCOUNT MUST YOU TOUCH THE FRONT RIM OF THE DRUM AS THIS AREA BECOMES HOT. YOU MAY REMOVE ITEMS FROM THE DRUM DURING THE 'COOL TUMBLE' PHASE.

Creasecare

At the end of the programme it may not be convenient to take out the clothes immediately. Do not worry, the Dryer will protect your clothes from creasing by gently turning them over occasionally. To tell you that the Dryer has completed the Drying Programme and is on Creasecare the display will show 'CREASECARE' and you will hear three bleeps when the clothes are tumbled.

Before unloading the clothes switch off the Dryer by unlocking and pressing the **On/Off Security** button.

The door remains locked when the drum is rotating.



Sorting your laundry

Wash codes appear on the labels on most washable items. You may have some items with the old wash code printed on the garment label. For easy reference, the new and old wash codes are shown on pages 20 and 21.

WASHING:

Articles labelled should be washed on programme 8.

Articles labelled should be washed on programme 9.

Hand wash only eg. glass fibre curtains and washable pleated garments containing synthetics.

Do not machine or hand wash.

Dry Cleaning:

All of these are dry cleaning symbols. The letters are to instruct the cleaner what type of solvent should be used.

Garments bearing these symbols should not be washed in your machine, unless the label says otherwise.

Do not dry clean.

Bleaching:

Bleach may be used. In this case the letters 'CL' show that chlorine household bleach such as 'Domestos' can be used. NB This applies to hand washing only. **Do not use bleach in your machine.**

Do not bleach.

NOTE: Do not wash non-colourfast items, woollens or really dirty clothes in a mixed load.


Woollens

Machine-washable woollens may be washed on programme , but remember:

1. Limit the load to 1.4kg (3lb).
 2. Do not use a Prewash (soaking may harm woollens).
 3. Do not tumble dry.
- These are shown on pages 20 and 21.

Additional Wash Features

Rinses and Rinse Hold

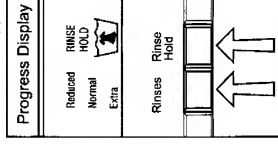

These are controlled by the buttons on the Control Panel marked Rinses and Rinse Hold. They are selected by pressing the appropriate button. You will hear a bleep and the display will show that the option has been selected. To cancel Rinses option, press the button until the rinse option you require appears in the display. To cancel Rinse Hold press the button again so that the option disappears from the display.

Rinses

Normal rinses will automatically be provided on the selection of a wash programme. By pressing the 'RINSES' button once, a rinse can be deleted; by pressing the button twice an extra rinse, to the normal quantity can be selected. Select an additional rinse with Profile Washes and for those with sensitive skins. Delete a rinse if you are washing a small quantity of clothes.

Rinse Hold


When Rinse Hold is selected the machine stops during the final rinse, holding the washing immersed in water until you are ready to spin dry. This minimises creasing on synthetic fabrics.

During the Rinse Hold period, the Rinse Hold light will flash and the machine will continue to give a gentle tumble every minute, followed by five beeps to remind you that it is on Rinse

Hold. (The beeps will not sound if Time Delay has been selected.)

NOTE: Rinse Hold can be selected at any time before or after a programme is started but before the final spin. It cannot be used on spin only and Prog 7 – wool programmes.


Delay Hours

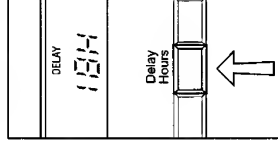

This feature can be used to delay the time (up to a period of 18 hours) when you want any of the wash, dry or wash and dry programmes to **finish**.

To use the Delay Hours press the Delay Hours button once – buzzer goes off, press the Delay Hours button twice, the bell symbol disappears and the display will show '1'. If the button is held in, the display will then increment from '1' to '18' and will keep repeating until you release the button, thus setting the time delay you require. Press the Start button and the selected time will flash on and off alternately with temperature (only when a wash programme has been selected). As the delay period progresses the display will decrease in hours to show the time left to the end of the programme.

 NOTE: If a delay time is selected that is shorter than the selected programme, (see page 27 for programme times), then the machine will start the wash programme as



Wash option

Normal

Profile

Light

Normal

Prewash

Profile

Prewash

Type of Soiling

– use for everyday items which are normally soiled.

– use for items which are heavily soiled eg. overalls; items stained with blood/oil/grease/gravy/coffee/tea/chocolate etc. The performance of this slightly longer low temperature, energy saving option is particularly enhanced when used with Biological Persil.

– for lightly soiled items only.

– use with Normal wash programmes at Normal wash temperatures.

– use with Profile wash programmes using lower wash temperatures.

Rinse and Spin Only Programmes

You can use your machine for rinsing and spinning or spinning only. Details of the Rinse and Spin Programmes are given below and on pages 20 and 21. The selected programme, stage of programme is shown on the Programme Progress Display.

When rinsing and/or spinning remember to:

1. Switch on the power supply to the machine.
2. Turn on the cold water if you are rinsing.
3. Open the door and load the items singly. Do not fill the drum more than half full.
4. Close the door firmly to engage safety latch with a click.
5. Select required Rinse and/or Spin Programme. (See page opposite.)
6. Lock the On/Off Security button.
7. Press Start.

NOTES:

Woollens and other 'Hand Wash Only' items should only be spin dried, but with all other washable fabrics it is advantageous to give them a rinse as well.

The spin can be stopped at any time by releasing the On/Off button.

Programme Display

Programme Selected

Rinse & Delicate Spin
3 Rinses & Super Spin
Super Spin
Delicate Spin

Spin Speed

800
1400
1400
800

Load your machine


Don't overload your machine. Clothes won't wash properly and damage may be caused to your machine and garments. See pages 20 and 21 for maximum wash loads.

Typical Weights

To help you wash the correct quantity of clothes, the chart below lists typical clothes weights.

Clothes	Weight
Blouse	Cotton 150g 5oz Other 100g 3½oz
Dress	Cotton 500g 1lb 2oz Other 350g 12oz
Jeans	700g 1lb 8oz
10 Nappies	1000g 2lb 3oz
Shirt	Cotton 300g 10½oz Other 200g 7oz
T-Shirt	125g 4½oz
Household items	
Duvet Cover (Double)	Cotton 1500g 3lb 5oz Other 1000g 2lb 3oz
Large Tablecloth	700g 1lb 8oz
Small Tablecloth	250g 9oz
Tea Towel	100g 3½oz
Bath Towel	700g 1lb 8oz
Hand Towel	350g 12oz
Double Sheet	500g 1lb 2oz
Single Sheet	350g 12oz

Additional tips:

- Blankets, double bedspreads and other bulky articles should be washed one at a time.
- To load a blanket, hold it by the centre and allow the corners to drop down. Feed it into the machine centre first.
- Highly absorbent loads such as towels and nappies should be limited to 3kg (7lb) per load to ensure adequate rinsing.
- Place small items in a washbag.
- Check the wash symbol on items such as T-Shirts. They may require a cool wash eg. .





Washing Detergent

Which one to use?

Use any low suds automatic powder. Non-automatic powders reduce wash performance and can cause overfoaming. Your machine has been specially developed to take advantage of biological powders. Hotpoint recommends Biological Persil Automatic.

How much to use

It is important to use the correct quantity in soft or hard water areas; too little won't get the clothes clean and too much is a waste. Quantities indicated below apply to Persil Original Automatic Powder. For other detergents refer to the packet. The Aquarius range of washing machines has been designed to use less water and less detergent. If in doubt, use the lower recommended quantity and amend in the light of your own experience.

Detergent	Cottons	Synthetics	Woollens
	Hard water/ Soft water*	Hard water/ Soft water*	Hard water/ Soft water*
Prewash	75/50 grams	75/50 grams	-
Full load	180/140 grams	110/80 grams	110/80 grams
Reduced load	120/80 grams	90/70 grams	90/70 grams


These doses are for normally soiled loads.

1 cup = 265ml = approximately 160g.

*If you are unsure, check with your local water company.

Where to put it

Pull-out the drawer on the left of the machine.

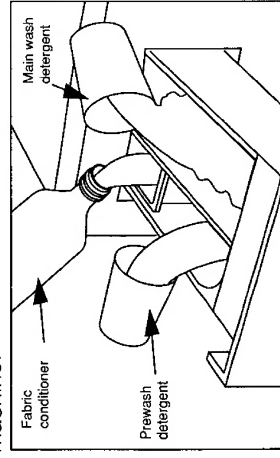

Powders or liquids which cannot be dispensed through the drawer should be used in detergent dispensers as recommended by the detergent manufacturer, whose instructions on use and quantities of detergents should be followed.

Concentrated detergents


These are now becoming more widely available. Follow the detergent manufacturer's guide regarding quantities to use.

Liquid Detergent


You can use any automatic low suds liquid detergent with your machine, using the Liquid Detergent Dispenser provided (see diagram below). Hotpoint recommends Persil Automatic Liquid. Just pour the liquid detergent into the Liquid Detergent Dispenser which is on the right hand side of the Dispenser Drawer (see below). The amount to use will be shown on the bottle.

Remove any water remaining from the previous wash before adding liquid detergent and ensure that the syphon tube is firmly in position.


When using liquid detergents in their own dispensers, follow manufacturer's instructions.

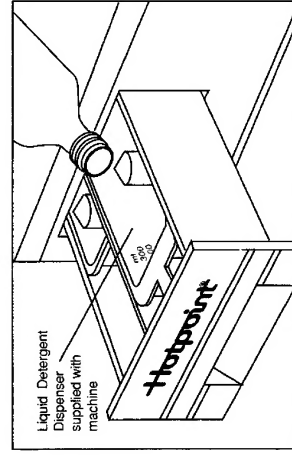

 We recommend you clean out the dispenser drawer every week. This helps to prevent detergent sticking (see page 29).



Selecting the Wash

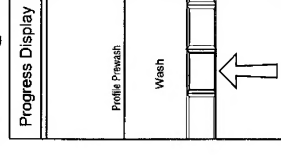


After you have chosen your wash programme, select the wash option you require. To do this press the Wash button. You will hear a bleep and the display will sequence through 'NORMAL', 'PROFILE', 'LIGHT', 'NORMAL PREWASH', 'PROFILE PREWASH' returning to NORMAL at approximately one second intervals, recycling as long as the button is pressed in. Wait until the appropriate option is displayed and then release the button.

If you do not select a wash option after you have chosen your wash programme then the machine will automatically select the 'Normal' option.

NOTE: The machine will automatically select 'Normal' Level for Mixed Wash and 'Light' for Quick Wash.

A guideline on which 'Wash' to choose for the **type** and **level** of soiling is given on the following pages.

Prewash can **ONLY** be selected when the machine is switched on and the programme display shows .

Mixed Wash

If you have mixed load of both natural and delicate fabrics it can be washed safely together on the Mixed Wash programme. Only silks, woollens and any article you doubt would be colourfast, need to be washed separately.

 
Load size should be no more than 2kg (4.4lb) and deep dye items eg. towels, which although marked colourfast, should be excluded as the long period of soak may cause colour to run onto the other garments.

The advantage of this programme is that it is very economical because of its low temperature, 40°C and long soak, for 4 hours. It gives excellent results if you are using a low suds biological detergent. For best results we recommend Biological Persil Automatic.

Should you wish to shorten the soaking time, switch off the machine by pressing the On/Off button. This will cancel the programme. To restart the machine press the On/Off button again, and select the Delicate spin programme, followed by 'Rinse and Delicate spin', repeat if you require extra rinses.


Quick Wash

If you want to freshen up those lightly soiled 'daily' items such as underwear, blouses and shirts, we suggest you use the Quick Wash programme. Load size should be limited to a maximum of 0.9kg (2lb) if the fabric mixes include synthetics. This programme will give a 40°C wash, rinse and delicate spin in approximately half an hour.




Selecting your Programme

Switching On and Off, including security lock.

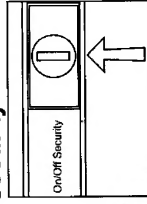

To switch the machine on simply press the On/Off Security button '1', plus '2', and No Spin, will appear in the Display Panel. You can then go ahead and select a programme.

Door Release Button/Security Lock

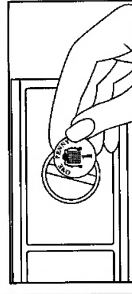

To unlock, turn the lock using a small coin, in a 90° anti-clockwise direction. To lock, turn the lock in a 90° clockwise direction. You do not have to lock these Security buttons. They are features which have been provided for those who may wish to use them.

Selecting a Programme

Selecting a Programme			
1	Normal	2	3
4	5	6	7
8	9	10	11
12	13	14	15
16	17	18	19
20	21	22	23
24	25	26	27
28	29	30	31
32	33	34	35
36	37	38	39
40	41	42	43
44	45	46	47
48	49	50	51
52	53	54	55
56	57	58	59
60	61	62	63
64	65	66	67
68	69	70	71
72	73	74	75
76	77	78	79
80	81	82	83
84	85	86	87
88	89	90	91
92	93	94	95
96	97	98	99
100	101	102	103
104	105	106	107
108	109	110	111
112	113	114	115
116	117	118	119
120	121	122	123
124	125	126	127
128	129	130	131
132	133	134	135
136	137	138	139
140	141	142	143
144	145	146	147
148	149	150	151
152	153	154	155
156	157	158	159
160	161	162	163
164	165	166	167
168	169	170	171
172	173	174	175
176	177	178	179
180	181	182	183
184	185	186	187
188	189	190	191
192	193	194	195
196	197	198	199
200	201	202	203
204	205	206	207
208	209	210	211
212	213	214	215
216	217	218	219
220	221	222	223
224	225	226	227
228	229	230	231
232	233	234	235
236	237	238	239
240	241	242	243
244	245	246	247
248	249	250	251
252	253	254	255
256	257	258	259
260	261	262	263
264	265	266	267
268	269	270	271
272	273	274	275
276	277	278	279
280	281	282	283
284	285	286	287
288	289	290	291
292	293	294	295
296	297	298	299
300	301	302	303
304	305	306	307
308	309	310	311
312	313	314	315
316	317	318	319
320	321	322	323
324	325	326	327
328	329	330	331
332	333	334	335
336	337	338	339
340	341	342	343
344	345	346	347
348	349	350	351
352	353	354	355
356	357	358	359
360	361	362	363
364	365	366	367
368	369	370	371
372	373	374	375
376	377	378	379
380	381	382	383
384	385	386	387
388	389	390	391
392	393	394	395
396	397	398	399
400	401	402	403
404	405	406	407
408	409	410	411
412	413	414	415
416	417	418	419
420	421	422	423
424	425	426	427
428	429	430	431
432	433	434	435
436	437	438	439
440	441	442	443
444	445	446	447
448	449	450	451
452	453	454	455
456	457	458	459
460	461	462	463
464	465	466	467
468	469	470	471
472	473	474	475
476	477	478	479
480	481	482	483
484	485	486	487
488	489	490	491
492	493	494	495
496	497	498	499
500	501	502	503
504	505	506	507
508	509	510	511
512	513	514	515
516	517	518	519
520	521	522	523
524	525	526	527
528	529	530	531
532	533	534	535
536	537	538	539
540	541	542	543
544	545	546	547
548	549	550	551
552	553	554	555
556	557	558	559
560	561	562	563
564	565	566	567
568	569	570	571
572	573	574	575
576	577	578	579
580	581	582	583
584	585	586	587
588	589	590	591
592	593	594	595
596	597	598	599
600	601	602	603
604	605	606	607
608	609	610	611
612	613	614	615
616	617	618	619
620	621	622	623
624	625	626	627
628	629	630	631
632	633	634	635
636	637	638	639
640	641	642	643
644	645	646	647
648	649	650	651
652	653	654	655
656	657	658	659
660	661	662	663
664	665	666	667
668	669	670	671
672	673	674	675
676	677	678	679
680	681	682	683
684	685	686	687
688	689	690	691
692	693	694	695
696	697	698	699
700	701	702	703
704	705	706	707
708	709	710	711
712	713	714	715
716	717	718	719
720	721	722	723
724	725	726	727
728	729	730	731
732	733	734	735
736	737	738	739
740	741	742	743
744	745	746	747
748	749	750	751
752	753	754	755
756	757	758	759
760	761	762	763
764	765	766	767
768	769	770	771
772	773	774	775
776	777	778	779
780	781	782	783
784	785	786	787
788	789	790	791
792	793	794	795
796	797	798	799
800	801	802	803
804	805	806	807
808	809	810	811
812	813	814	815
816	817	818	819
820	821	822	823
824	825	826	827
828	829	830	831
832	833	834	835
836	837	838	839
840	841	842	843
844	845	846	847
848	849	850	851
852	853	854	855
856	857	858	859
860	861	862	863
864	865	866	867
868	869	870	871
872	873	874	875
876	877	878	879
880	881	882	883
884	885	886	887
888	889	890	891
892	893	894	895
896	897	898	899
900	901	902	903
904	905	906	907
908	909	910	911
912	913	914	915
916	917	918	919
920	921	922	923
924	925	926	927
928	929	930	931
932	933	934	935
936	937	938	939
940	941	942	943
944	945	946	947
948	949	950	951
952	953	954	955
956	957	958	959
960	961	962	963
964	965	966	967
968	969	970	971
972	973	974	975
976	977	978	979
980	981	982	983
984	985	986	987
988	989	990	991
992	993	994	995
996	997	998	999
1000	1001	1002	1003
1004	1005	1006	1007
1008	1009	1010	1011
1012	1013	1014	1015
1016	1017	1018	1019
1020	1021	1022	1023
1024	1025	1026	1027
1028	1029	1030	1031
1032	1033	1034	1035
1036	1037	1038	1039
1040	1041	1042	1043
1044	1045	1046	1047
1048	1049	1050	1051
1052	1053	1054	1055
1056	1057	1058	1059
1060	1061	1062	1063
1064	1065	1066	1067
1068	1069	1070	1071
1072	1073	1074	1075
1076	1077	1078	1079
1080	1081	1082	1083
1084	1085	1086	1087
1088	1089	1090	1091
1092	1093	1094	1095
1096	1097	1098	1099
1100	1101	1102	1103
1104	1105	1106	1107
1108	1109	1110	1111
1112	1113	1114	1115
1116	1117	1118	1119
1120	1121	1122	1123
1124	1125	1126	1127
1128	1129	1130	1131
1132	1133	1134	1135
1136	1137	1138	1139
1140	1141	1142	1143
1144	1145	1146	1147
1148	1149	1150	1151
1152	1153	1154	1155
1156	1157	1158	1159
1160	1161	1162	1163
1164	1165	1166	1167
1168	1169	1170	1171
1172	1173	1174	1175
1176	1177	1178	1179
1180	1181	1182	1183
1184	1185	1186	1187
1188	1189	1190	1191
1192	1193	1194	1195
1196	1197	1198	1199
1200	1201	1202	1203
1204	1205	1206	1207
1208	1209	1210	1211
1212	1213	1214	1215
1216	1217	1218	1219
1220	1221	1222	1223
1224	1225	1226	1227</

Programmes

This guide shows you how to set your machine. Even though it both washes and dries it is very simple.
 For Washing only – select a Programme + Optional Wash Features.
 For Washing and Drying – select a Programme + Optional Wash Features and a Drying Time/Drying Programme.
 For Drying only – select a Heat Setting and a Drying Time.
 The machine makes all of the other decisions for you. The following pages explain the settings in much more detail.

Pro-gramme Display	ITCL Codes New	Old	Fabric	Wash Temp °C				Maximum Load	Drying Load	Heat Setting	Drying Guide	Approx Drying Time (mins)* Iron Dry Fully
				Pre-wash & Profile	Normal	Pre-wash & Profile	Light					
1	95	1	White Cotton and linen without special finishes	60	85	4.5kg 10lb	2.3kg 5lb	Cottons/ Synthetics	30	40-55		
2	60	2	Colourfast cotton, linen or viscose without special finishes	50	60	4.5kg 10lb	2.3kg 5lb	Cottons/ Synthetics	30	40-55		
3	60	3	White nylon, white polyester/cotton mixtures	50	60	2kg 4.4lb	2kg 4.4lb	Acrylics	50	65-75		
4	50	4	Coloured nylon, polyester, acrylic/cotton mixtures, cotton or viscose with special finishes (eg, drip dry), coloured polyester/cotton mixtures	45	50	2kg 4.4lb	2kg 4.4lb	Acrylics	60	65-75		
5	40	5	Non-colourfast cotton, linen and viscose	35	40	4.5kg 10lb	2.3kg 5lb	Cottons/ Synthetics	30	40-55		
6	40	6	Acrylics, acetates and tri-acetates, blends of these fabrics with wool, polyester/wool	35	40	2kg 4.4lb	2kg 4.4lb	Acrylics	60	65-75		
7	40	7	Woolen blankets, wool mixtures with cotton or rayon, silk	35	40	2.7kg 6lb	2kg 4.4lb	Woolens Do not Tumble Dry				
			Shrink resistant machine-washable and Superwash Woolmark garments	35	40	1.4kg 3lb	1.4kg 3lb					

Pro-gramme Display	ITCL Codes New	Old	Fabric	Wash Temp °C				Maximum Load	Drying Load	Heat Setting	Drying Guide	Approx Drying Time (mins)* Iron Dry Fully
				Pre-wash & Profile	Normal	Pre-wash & Profile	Light					
8	30	8	Silk and printed acetate fabrics with colours not fast at 40°C	30	30	2kg 4.4lb	2kg 4.4lb					
9	95	9	Cotton articles with special finishes capable of being boiled but requiring drip drying	95	60	2kg 4.4lb	2.3kg 5lb	Cottons/ Synthetics	30	40-55		
Quick Wash			Lightly soiled items only – Not woollens	–	40	0.9kg 2lb	2kg 4.4lb	Acrylics	60	65-75		
Mixed Wash			All fabric types except those covered by 7, 8 and 9 non colourfast items	40	–	2kg 4.4lb	2kg 4.4lb	Acrylics	60	65-75		

*See page 23 for further details – synthetic or mixed loads should be restricted to 2kg (4.4lb).

†The approximate drying times, also printed on the facia of your machine, are a guide and should be modified by your own experience.

Rinse and Spin Programmes

Programme Display	Fabric	Max. Dry Weight Load	Rinse Hold
Rinse and Delicate Spin	Delicates	2kg 4.4lb	Select to minimise creasing
3 Rinses and Super Spin	Natural	4.5kg 10lb	Select to minimise creasing
Delicate Spin – 800rpm (short)	Delicates 95/ 96/ 97/ 98/ 99/ 100	2kg/4.4lb 1.8kg/4lb/4.1lb	Not Applicable
Super Spin – 1400rpm (long)	Natural Machine washable wool	5kg/11lb 2.7kg 6lb/1.4kg 3lb	Not Applicable

NOTE: Do not rinse woollens or other hand wash only items.